


BED BOSFOR - ASSEMBLY INSTRUCTION

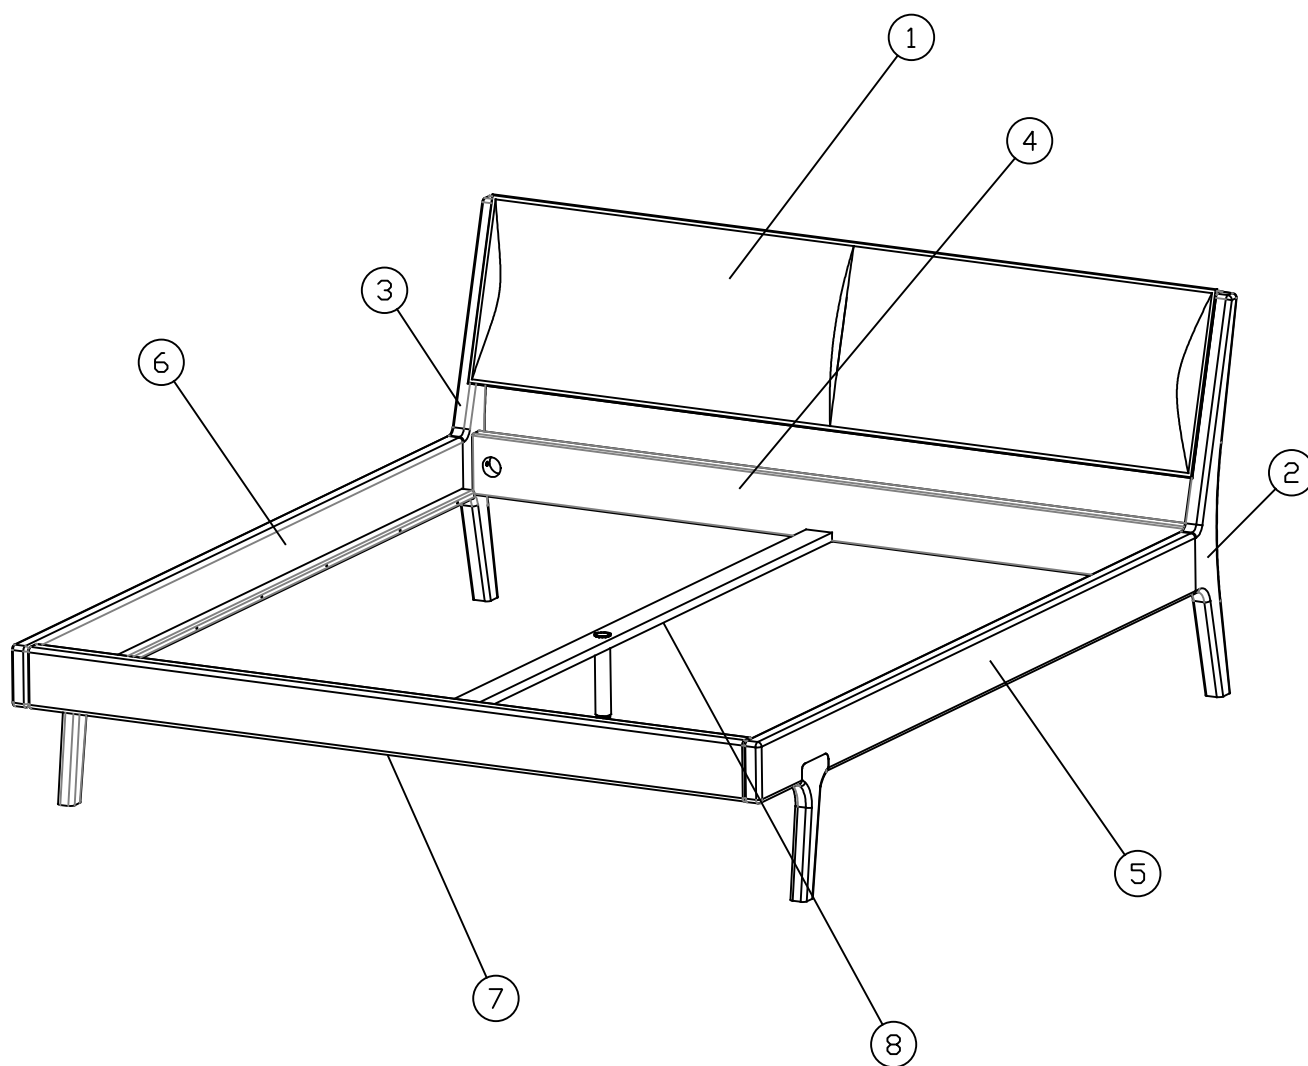

40 Minutes



Ø10x40



Ax16

M6x50



Bx8


M6x55



Cx4



Dx8



Ex2



Fx2



Gx2

3,5x20



Hx14

SW 5




1x

SW 4





1x

1.

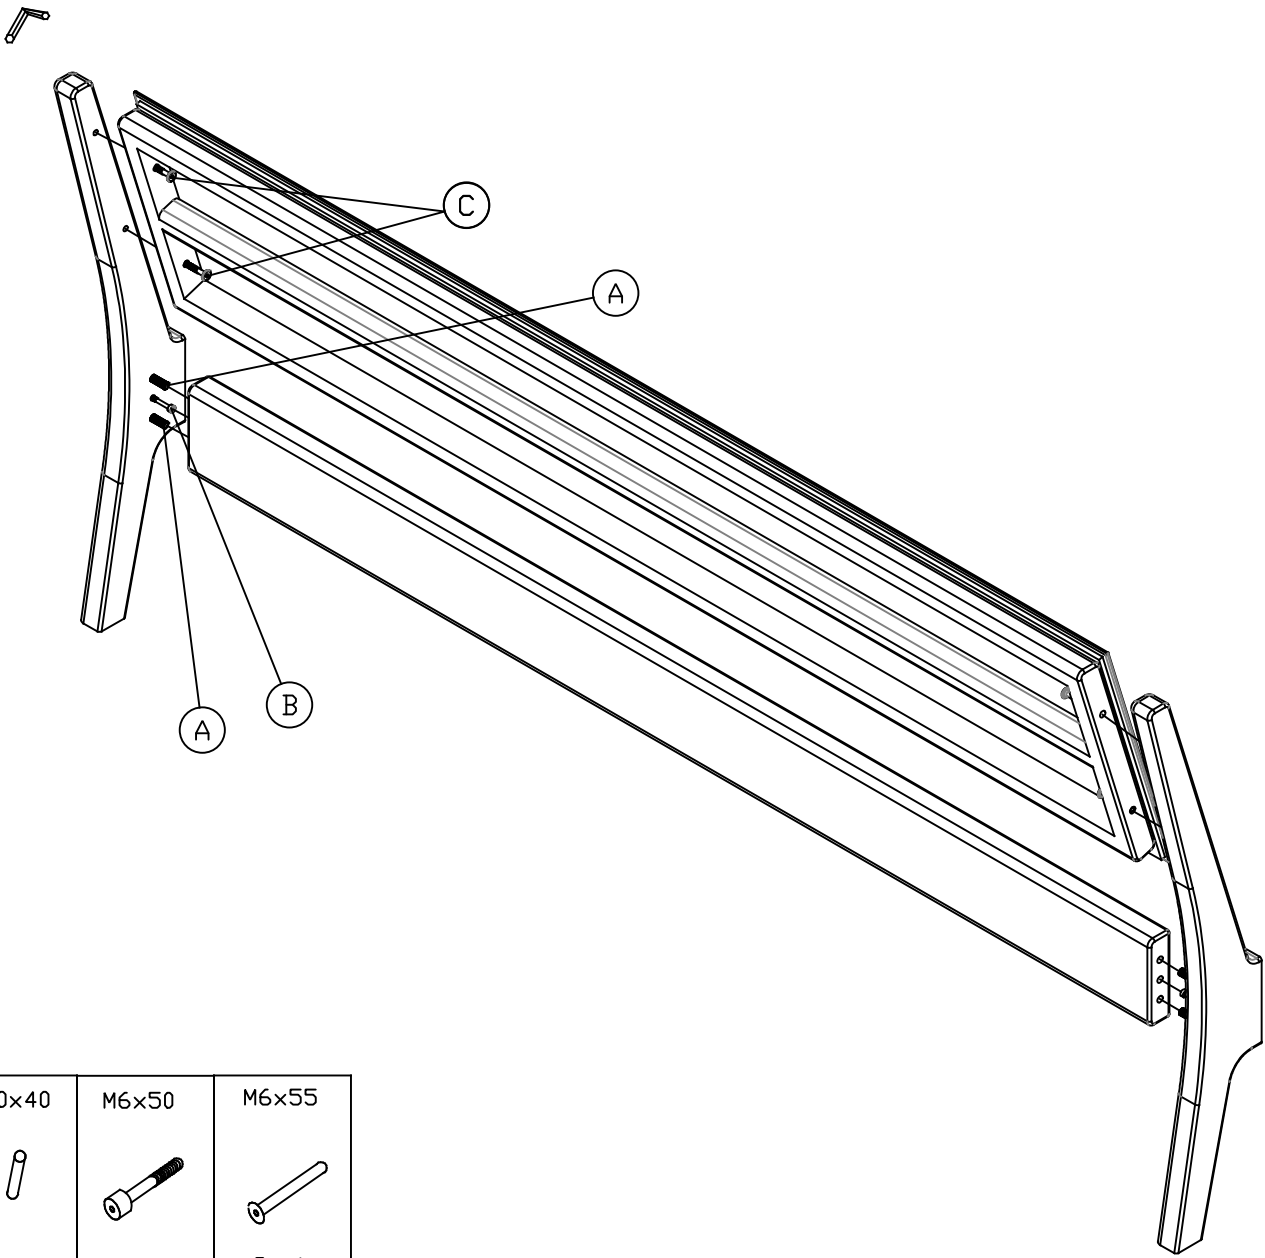


Ø10×40	M6×50	M6×55
		
A×4	B×2	C×4

2.

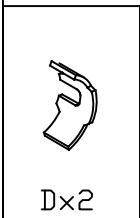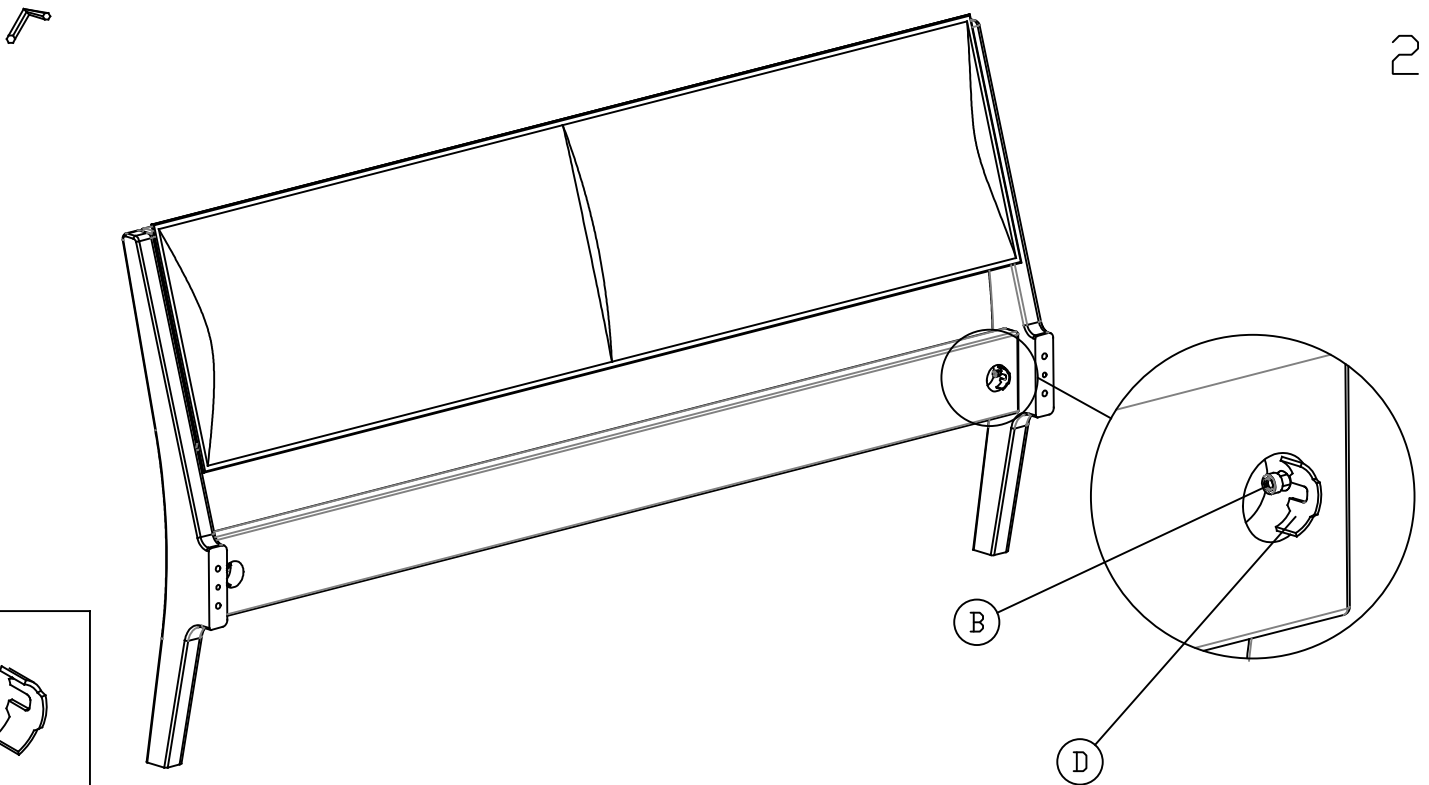

D×2

3.

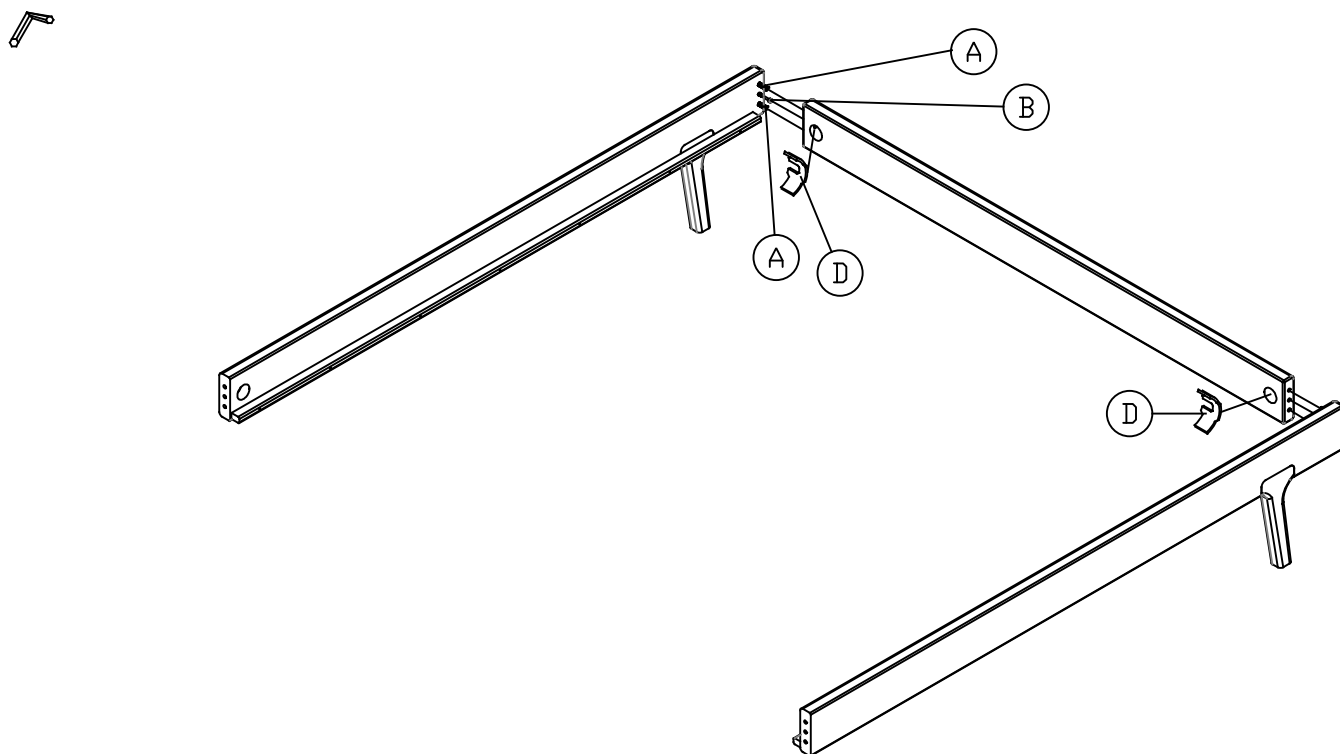

Ø10×40

M6×50





A×4

B×2

D×2

4.

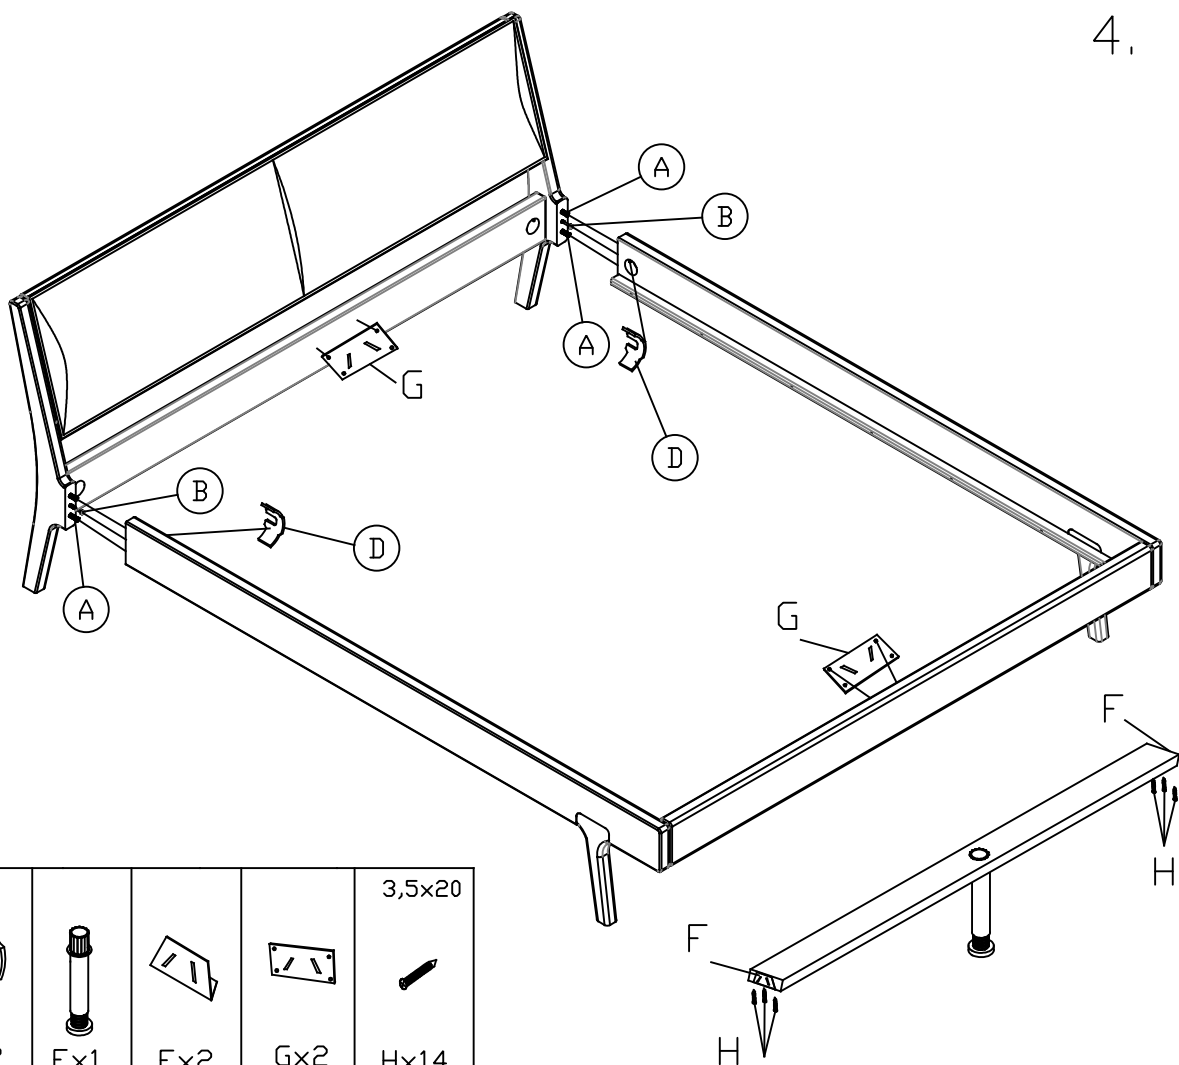

Ø10×40

M6×50

3,5×20



A×4

B×2

D×2

E×1

F×2

G×2

H×14