





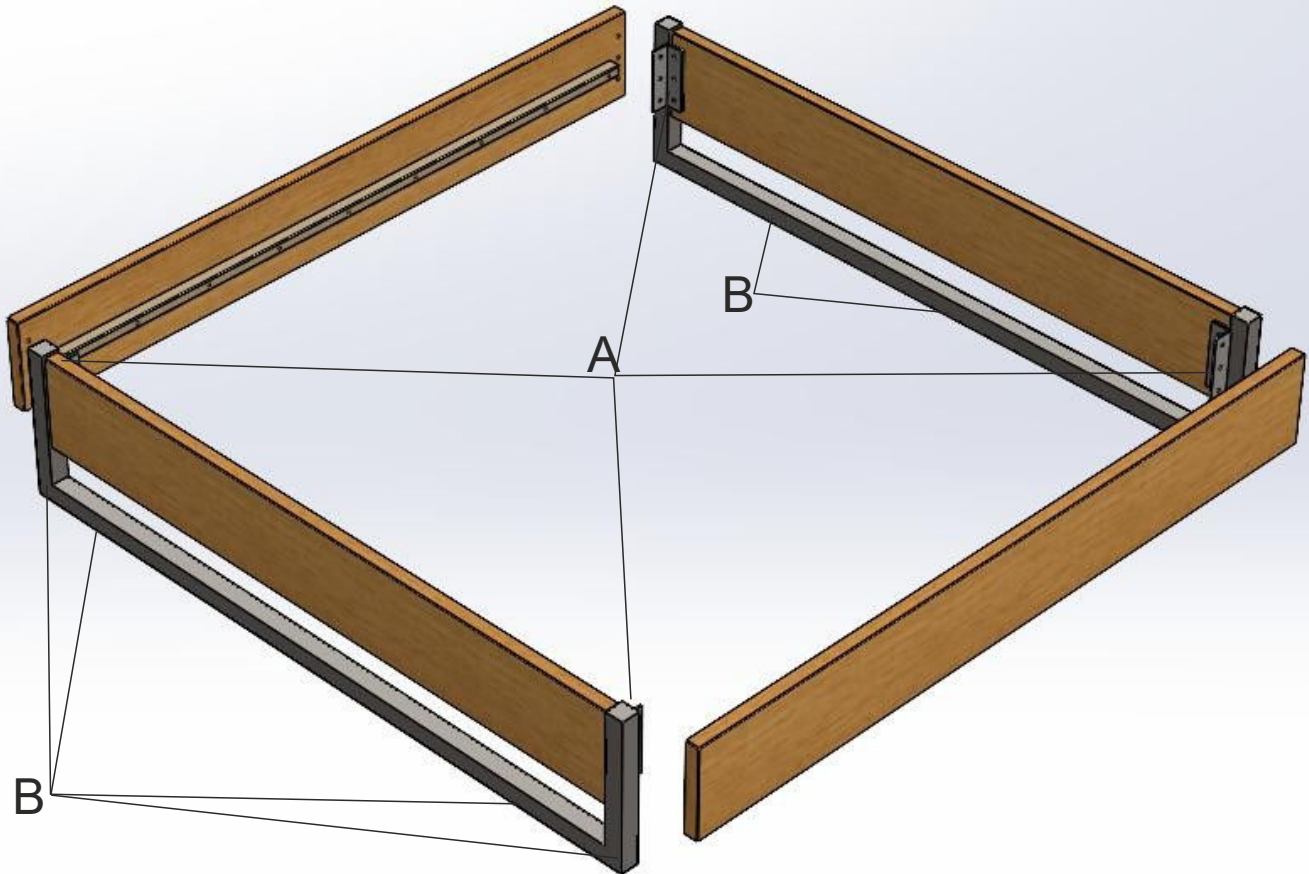







BED VENECIA T FABRIC - ASSEMBLY INSTRUCTION




M6x30  12 Packed 20 on bed Ax32	Black felt  Bx8	 Cx2	 Dx2	M6x60  Gx8
3,5x30  Ex44	6x70  Fx2	 Hx1	Distancer  Hx1	



BED VENECIA T FABRIC


- ASSEMBLY INSTRUCTION

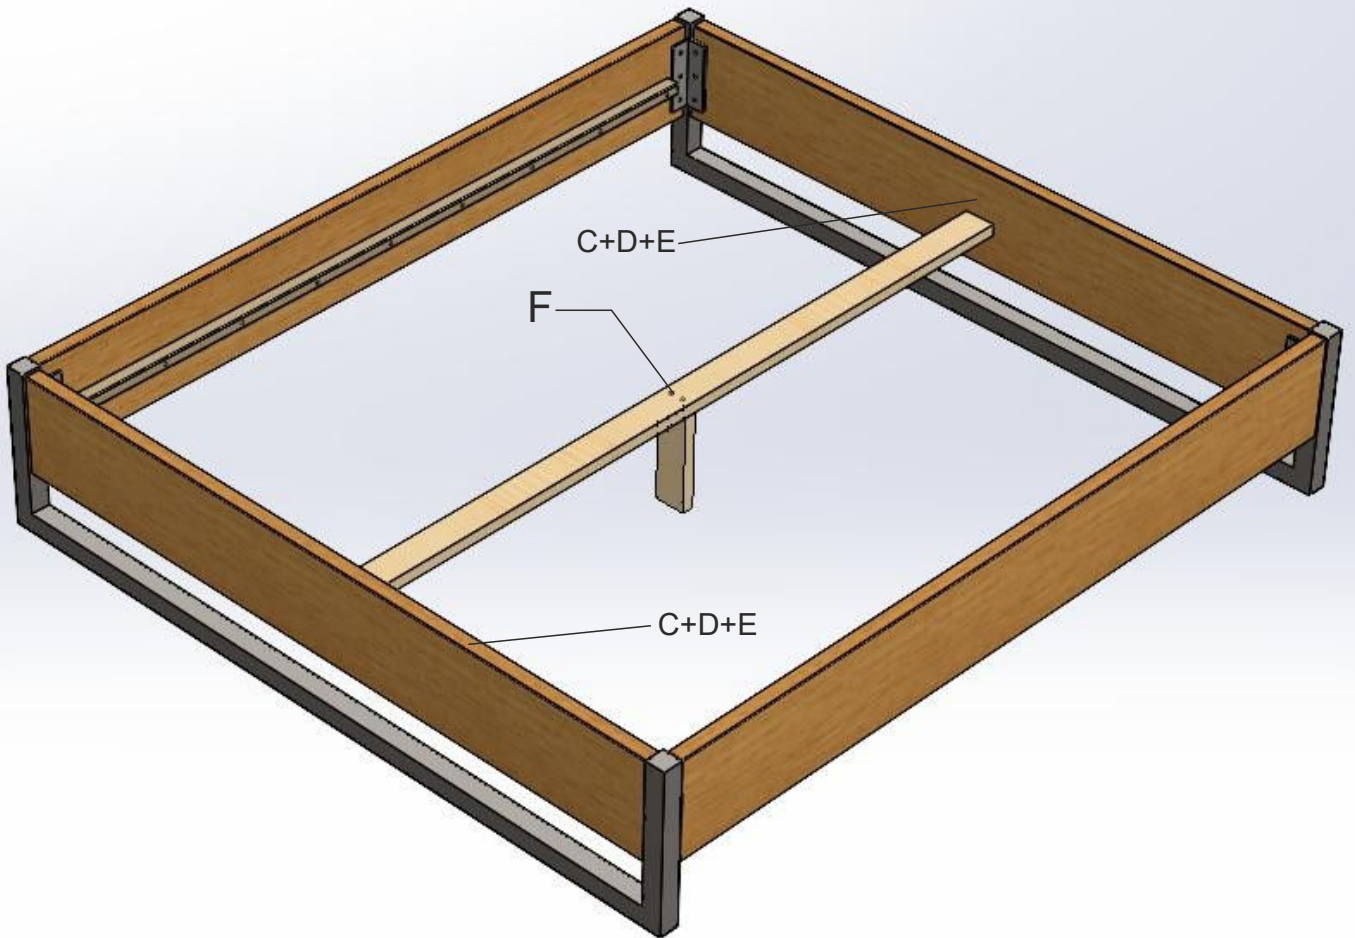



BED VENECIA T FABRIC

- ASSEMBLY INSTRUCTION

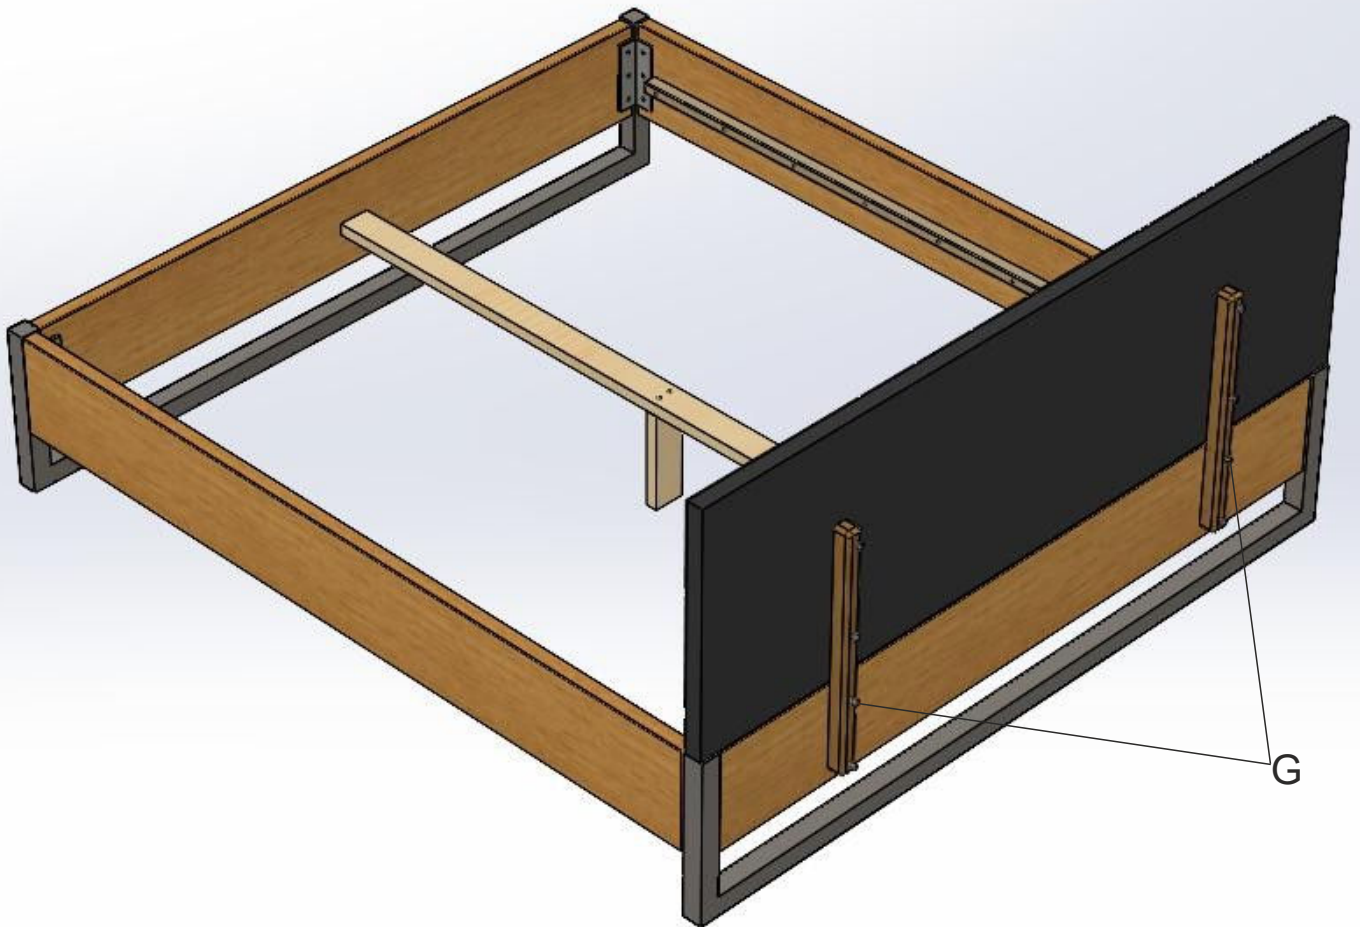



BED VENECIA T FABRIC - ASSEMBLY INSTRUCTION

Keep distance between the slats with distancer (G)

